

MEASURE FOR PANTS

HOW TO MEASURE YOURSELF

WAIST - Measure around the smallest part of your waist located at your belly button.

HIP - Measure around the widest part of your hip/ rear area.

INSEAM - Measure from crotch center to ankle bone.

MEN'S PANTS

- Your size is the measurement of your waist and inseam in inches.
- Sizing is available in 28-54 waist. Some odd sizes available, please see style numbers for exact sizing and availability.

WOMEN'S PANTS

NUMERIC (US)	WAIST	HIP
2	25	351/2
4	26	361/2
6	27	371/2
8	28	381/2
10	29	38½
12	301/2	41
14	32	421/2
16	331/2	44
18	351/2	46
20	38	48

Regular | **31"**Tall | **35"**



